
# JCHR35W1B/W2B(new)

6-channel LCD remote controller with timer

User Manual

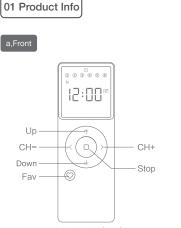




JCHR35W1B(new) Hand-held 6-channel LCD remote controller with timer

b. Back

JCHR35W2B(new) Wall-mounted 6-channel LCD remote controller with timer

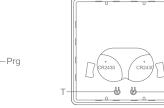


JCHR35W1B(new) Hand-held 6-channel LCD remote controller with timer

-4-

CR2450 3V

CR2450

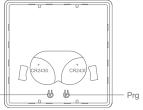

JCHR35W2B(new) Wall-mounted 6-channel LCD remote controller with timer

02 Models & Parameters (more info please refer to the nameplate)

Electrical Specification	Standard	
Battery Type	Hand-held:CR2450*3V*1	Wall-mounted: CR2430*3V*2
Working Temperature	-10℃-50℃	
Radio Frequency	433.92M±100KHz	
Transmit Distance	>=30m indoor	


# 03 Caution!

1. The transmitter should not be exposed to moisture or impact, so as not to affect its life

- 2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
- 3. When the battery voltage is too low, the LED screen will show a low voltage prompt, prompting to replace the battery.
- 4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.





### a.Channels & Groups Toggling

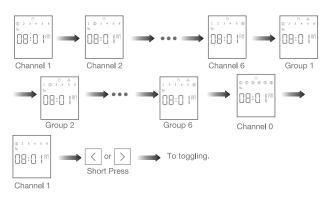

Note: Channel 0 is where all channels are shown as steady-lit.


## b.Number of Channels Setting

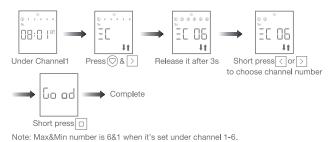

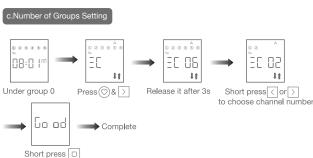


Note: Max&Min number is 6&1 when it's set under channel 0.

#### d.Channel in Group Setting

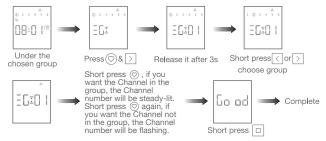

Note: Channel in groups setting is under GROUP 1-6.

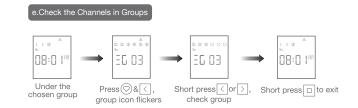


### f.Prohibit Dual-key Operation




② Repeat the above, dual-key operation activated


Note: When dual-key operation prohibited, these programming setting functions are not allowed.

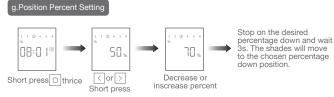

Note: All the shades under same group will run to same position after percent setting.

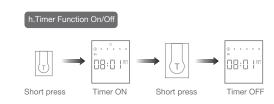


## i.Local Time Setting

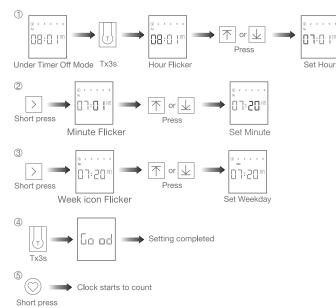


#### . \_ \_

Note: Press < to return to previous setting.

## j.Timer Control

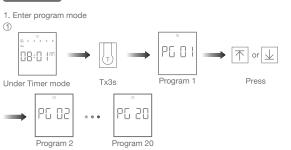


Note: 1. Press Up&Stop, LCD shown CL00, means current data cleared 2. Press Down&Stop, LCD shown CP01, means first data set copied to current set

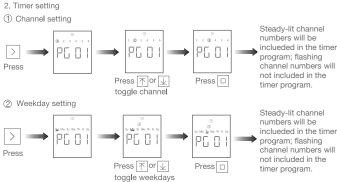


#### 3. To exist timer setting

Exist from timer setting, no data saved Press


4. To save timer setting

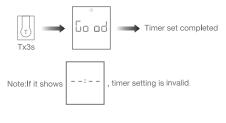


#### k.Default Setting

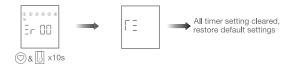

I.For other operations, pls refer to the motor operation instruction

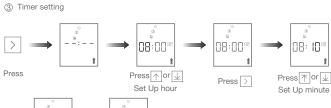

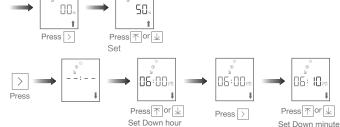

Press >

1

PG 0.

Timer setting

completed

100

Press 1 or 🖳

Set percentage

1

00

Press >

1