

JCHR35W5A1/A2/A3/A4 Remote Controller User Manual

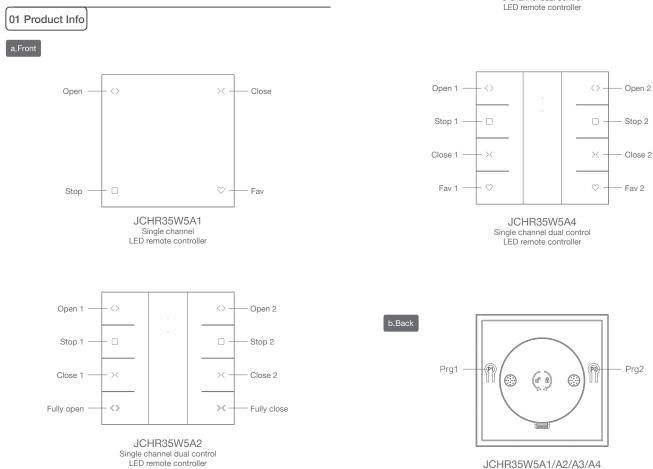

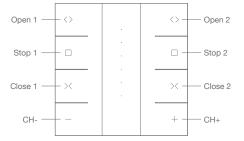

JCHR35W5A3 6-channel dual control LED remote controller


02 Models & Parameters (more info please refer to the nameplate)

Electrical Specification	Standard
Battery Type	CR2430*3V*2
Working Temperature	−10°C−50°C
Radio Frequency	433.92M ± 100KHz
Transmit Distance	>=30m indoor

03 Caution!

 - 1. The transmitter should not be exposed to moisture or impact, so as not to affect its life
- During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
- When the battery voltage is too low, orange LED flickers when you press button, indicating to replace battery.
- Please properly dispose of used batteries according to the local garbage classification and recycling policy.





(2) Repeat above step, dual-key operation activated

Note: When dual-key operation prohibited, these programming setting functions are not allowed:such as limits setting

h.Hot Key to the Fav. Position

JCHR35W5A2



Fully open or Fully close x2s

JCHR35W5A3



Fast get to the Fav. point

Note: The Fav. position setting only can be done after limits set.

h.For other operations, please refer to the motor operation instruction

Note: When all LEDs are lit, that is channel 0 (All channels move together).