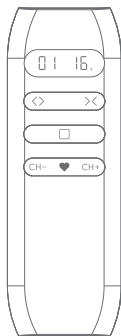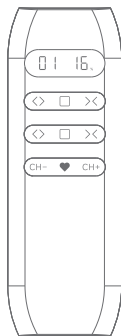# JCHR35W3C1/C2
Hand-held LCD Remote Controller
User Manual

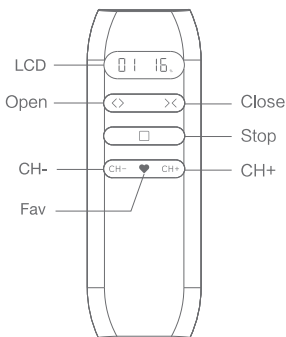## 01 Product Info

JCH35W3C1
16-channel LCD
remote controller

JCH35W3C2
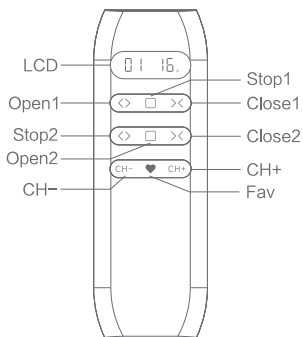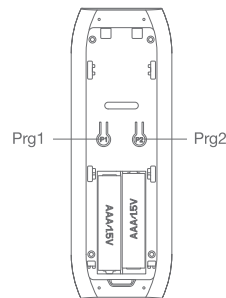16-channel dual control LCD
remote controller

02 Buttons

a. Front

LCD
Open
Stop
CH-
Fav
Close
CH+

JCH35W3C1
16-channel LCD
remote controller

LCD
Open1
Stop2
Open2
CH−
Stop1
Close1
Close2
CH+
Fav

JCH35W3C2
16-channel dual control LCD
remote controller

b. Back

Prg1   Prg2

03 Parameters(more info please refer to the nameplate)

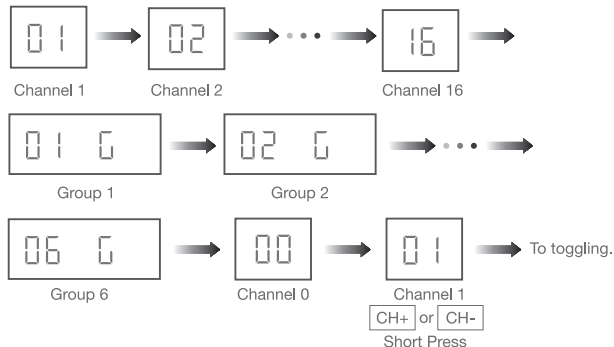| Electricial Specification	Standard
Battery Type	AAA battery*2
Working Temperature	-10℃-50℃
Radio Frequency	433.92M±100KHz
Transmit Distance	>=30m indoor

04 Caution!

1. The transmitter should not be exposed to moisture or impact, so as not to affect its life
2. During use, when the remote control distance is significantly shorter or less sensitive, please check whether the battery needs to be replaced.
3. When the voltage is too low, the LCD screen digital display will be weak, prompting to replace the battery.
4. Please properly dispose of used batteries according to the local garbage classification and recycling policy.

05 Instructions
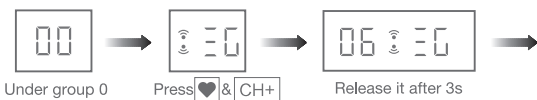
a.Channels & Groups Toggling

Channel 1 → Channel 2 → ··· → Channel 16 →

Group 1 → Group 2 → ··· →

Group 6 → Channel 0 → Channel 1 → To toggling.

Channel 1
CH+ or CH-
Short Press

Note：Channel 0 is the group control for all the channels.

b.Number of Channels Setting

01	→	⌗ΞC	→	16 ⌗ΞC	→

Under Channel 1   Press ♥ & CH+   Release it after 3s

15 ⌗ΞC	→	oႬ	→ Complete

Short press CH+ or CH-
to choose channel number

Note: Max&Min number is 16&1 when it's set under channel 1-16.

c.Number of Groups Setting

00	→	⌗ΞG	→	06 ⌗ΞG	→

Under group 0   Press ♥ & CH+   Release it after 3s

05 ⌗ΞG	→	oႬ	→ Complete

Short press CH+ or CH-
to choose channel number

Note: Max&Min number is 6&0 when it's set under channel 0.

d.Channel in Group Setting

01 Ⴚ	→	⌗ΞG	→	01 ⌗	→	02 ⌗

Under the chosen group   Press ♥ & CH+   Release it after 3s   Short press CH+ or CH- choose group

Short press ♥ , if you
want the Channel in the
group, the Channel
number will be steady-lit.
Short press ♥ again, if
you want the Channel not
in the group, the Channel
number will be flashing. → oႬ → Complete

Short press □
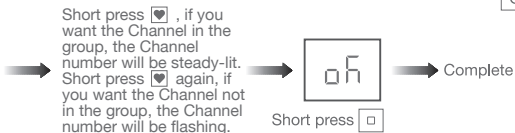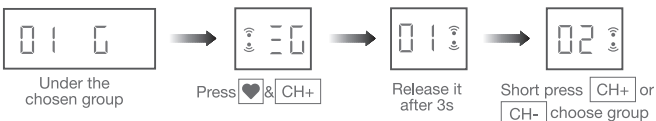
Note: Channel in groups setting is under GROUP 1-6.

e.Check the Channels in Groups

01 Ⴚ	→	01 Ⴚ	→	10 Ⴚ

Under the chosen group   Press ♥ & CH- group icon flickers   Short press CH+ or CH- check channel

→ | 01 Ⴚ |

Short press □ to exit

f.Prohibit Dual-key Operation

① P1 or P2 → | 01 L | → Dual-key operation prohibit

Prgx10s   LCD shown a lock icon
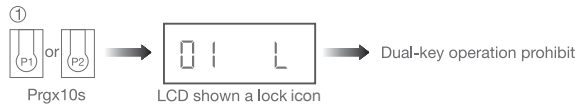
② Repeat the above, dual-key operation activated

Note: When dual-key operation prohibited, these programming setting functions are not allowed.

g.Position Percent Setting

01	→	01 50%	→	01 30%

Short press □ thrice   CH+ or CH- Short press   Decrease or inscrease percent

→ Stop on the desired percentage down and wait 3s. The shades will move to the chosen percentage down position.

Note: All the shades under same group will run to same position after percent setting.

h.For other operations, please refer to the motor operation instruction